



Bandit 3 Alarm Smart Tag - Kroger operating instructions.



LED



None Slip Pad

Anti-Tamper Cover



Locked Position

Unlock Position

Sleep Mode: Tag will remain in sleep mode until the user activates the tag.

How to attach and activate the Bandit Tag: User applies the tag to the box, once the tag has been applied to the box, set the switch to the lock position by sliding the lever. Once the lock has been set the tag will automatically arm, the tag LED will flash one time with a beep to indicate the tag is armed.

Warning:

1. If you lock the lever before the tag is applied the tag will not ARM

Applying the Bandit Tag:

1. Apply the tag to the box (make sure that the LED and IR window is facing upwards)
2. Press down on the tag lightly to hold tag in place on the box.
3. Set the locking lever to the locked position.

Suggestion: If the box is too long placing the tag close to the edge of the box is better than the center of the box.

Press down lightly.



Tag in armed status: When the tag is attached to merchandise and activated, the tag's LED will flash every 10 seconds to indicate tag is in armed status.

Anti-Tamper Warning: If the tag is pried from the packaging the tag detects the release of the anti-tamper plunger, it will begin to beep rapidly as a warning that the tag is about to alarm. If the tag is placed back on the packaging with the anti-tamper plunger facing down within the 10 beeps, the beep will stop, the tag is again armed and ready to secure the packaging. If the tag has not been replaced to the packing within the 10 continuous beeps, the tag will alarm.

Anti-Tamper Alarm: When the tag is pried/the bands cut from the merchandise the tag detects the release of the anti-tamper plunger, the tag will trigger and self-alarm.

Loose Alarm: If the band of the tag has been cut or removed the tag will alarm.

EAS Alarm: When the tag is in the armed mode, and enters into the EAS system's field the EAS system will trigger the tag to self-alarm, the EAS system will also alarm.

Wi-Fi Remote Alarm: When the tag alarms, it will send a signal to remote alarm reader. The reader will alarm synchronously.

Removal of the Tag: The sales associate places the S3 Key detacher on the tag, align the ears of the detacher with the indentations on the tag, the lock will open and disarm the tag. (This indicates that the tag has been deactivated) The locking lever will automatically switch to the unlocked position. The sales associate can now safely remove the tag from the box. The tag is ready to be reapplied to new packaging.



Align the ears of the detacher with the indentations on the tag.



Tag will disarm for removal.



Turn Tag over to remove the tag from the box.

How to disarm the Tag: When the tag triggers an alarm, the user must take the tag and merchandise to the POS and use the S3 Key Magnetic Detacher, to turn off the alarm.

Alarm Duration: Bandit Tag will continue to alarm until it has been reset with the S3 Key Magnetic Detacher, the alarm duration is three minutes to conserve battery the life.